

ASSEMBLY INSTRUCTIONS

If you have any problems installing your **MONOGRIP®** please call us at (805) 239-1440. We will be glad to help make sure your grip fits perfectly.

Use these instructions as a guide. Some gun frames may require a slightly different assembly procedure.

Additional instructions may be packaged with your particular grip.

HOGUE®

HOGUE, INC.

P.O. Box 91360, Henderson, NV 89009


805-239-1440

www.Hogueinc.com

IMPORTANT CONSUMER AND WARRANTY INFORMATION ON BACK OF PACKAGE


CRD-INS-R2_10142015

Please use these instructions as a general guide. Due to the larger number of different gun frame styles, your particular installation may be slightly different, although this same basic procedure will be used. Please look for any supplemental instructions that may be included in your package. **If you have any problems, do not hesitate to contact us.**

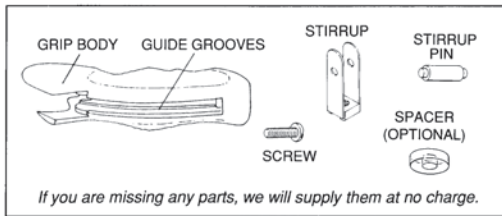


1 Before starting to work, **MAKE SURE THE GUN IS UNLOADED.** Remove the existing grips.


2 The Stirrup is made from spring steel and will spread from pin for removal and installation. Spread stirrup and take pin out.

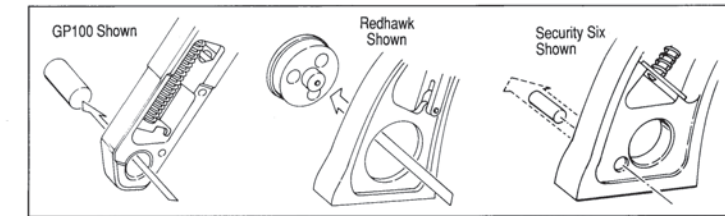


3 It is necessary to remove stock grip locating pins or lugs on the following revolvers:
Ruger: GP100, SP101, Redhawk, Super Redhawk, Security Six and Speed Six.
Colt: Detective Special and Diamond Back.
Taurus: All frames.

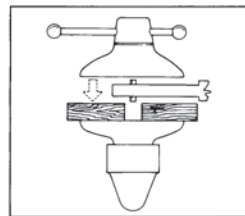

4 Remove grip pin(s) or lug(s) by using hammer and punch, or bench vice and block of wood or other shim as shown.

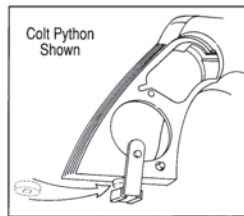


5 Install stirrup as pictured. For **Blackhawk** models use lowest stirrup pin for your frame type. Take screw out of stirrup. If a spacer is included with your grip, insert it between the stirrup and bottom strap as shown.

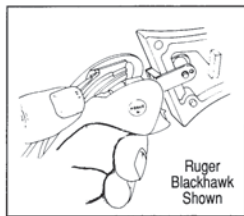


6 Mate the gun frame and **MONOGRIP®** by first placing stirrup and pin(s) into the internal guide grooves.

IMPORTANT!


Check all functions of your firearm after grips are installed. Test fire your firearm. This is especially important if weapon is to be used for law enforcement duty.

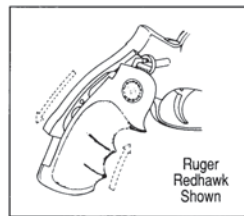

7 The **MONOGRIP®** should be guided up behind the trigger guard, then using a radial motion, fully seat the frame into your **MONOGRIP®**. It must be fully seated on the frame before inserting mounting screw.

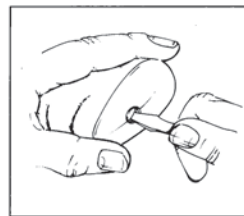

8 Insert mounting screw through the hole on bottom of the grip. Insert screw so it enters stirrup threads, and using the appropriate screwdriver, tighten screw until snug, no tighter. Over-tightening does nothing to increase grip tightness and can damage the screw or stirrup.

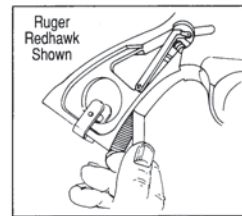

9 Your **MONOGRIP®** is designed to fit an average size gun frame, however, frame dimensions do vary slightly from gun to gun. **If necessary** your **MONOGRIP®** can be adjusted by placing small shim(s) of tape on the lower corner of the front strap. Add or subtract tape until grip is flush with backstrap.

A FEW WORDS ABOUT FIT

It is a fact that firearm frame dimensions vary from firearm to firearm. No grip is shipped out unless it fits and functions on our firearms properly. Please keep this in mind.

It is imperative to make sure that every firearm functions properly with after-market grips installed. Although the grip functions properly on our firearms, it is the user's responsibility to check all functions of a firearm after new grips are installed. This is especially important if the weapon is to be used for law enforcement duty. If you do not feel competent to check the proper function yourself, we suggest visiting your local gunsmith to check this for you.

It is important to test fire the firearm before using in the field.